



WORK STAND

ATD-7811




Assembly Instructions for Work Stand

- 1. Slide the foam padding (#8) onto the bent tube (#9). Slip a leg tube (#6) into the bent tube (#9). Line up the holes in the bent tube and the leg tubes and insert the eyebolt with chain attached (#4) to secure them.**
- 2. Assemble the second bent tube the same as above, but use the hook bolt (#2) to secure the leg tube and the bent tube.**
- 3. Complete the assembly by placing one of the assembled tubes on top of the other. Line up the holes and secure with the M8x80 pivot bolts (#3). Be sure to place a flat washer (#5) outside, between and inside the tubing assemblies. Use M8 nuts (#1) to tighten the pivot bolts (#3). Then push on tube ends (#7).**



ATD-7811

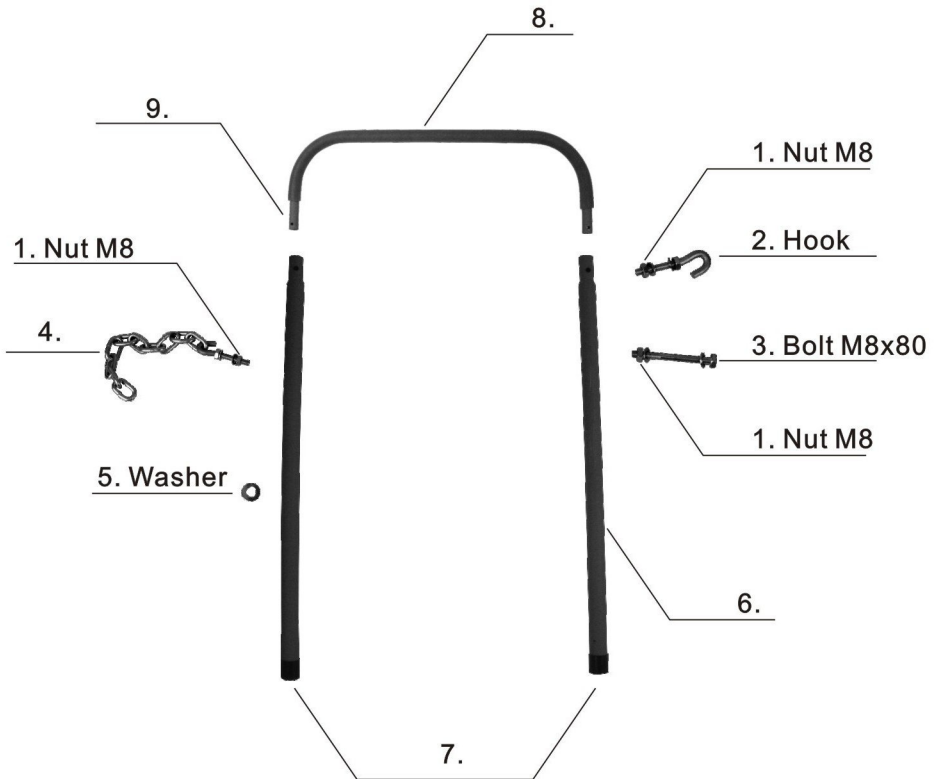

ORDERING PART#	ITEM#	PART DESCRIPTION
PRT7811-1	1,2,3,4,5	HARDWARE KIT
PRT7811-6	6	LEG TUBE
PRT7811-7	7	TUBE END
PRT7811-8	8	FOAM PADDING
PRT7811-9	9	BENT TUBE